


www.icmcorp.net


CABLE SERIES: 59 OR 6
TOOL: CPLCCT-SLM
TIP: LMTIP-S (FS) OR LMTIP-G (RG)
STRIPPER: PSA59/6

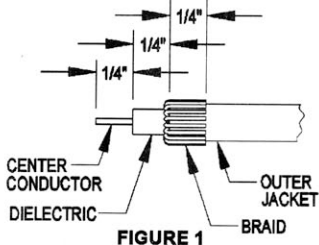

RCA INSTALLATION INSTRUCTIONS

Use an industry standard 1/4" x 1/4" cable prep tool. Assure that braid is folded back onto the jacket as shown in Figure 1.


FIGURE 2



Insert pin onto the prepared cable according to Figure 2.

Insert cable with pin attached as shown in Figure 3. You will feel the pin click into position.

FIGURE 3

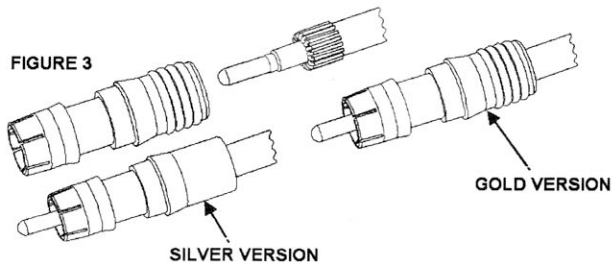

Install the color ring onto the connector as shown in figure 4.

FIGURE 4

