

(1)




1. Once your Mini-Cable is properly stripped, you are ready to install your connector. It is very important to keep your connector perfectly straight with the cable. The cables center conductor has to meet a small opening inside the connector. If the connector is not installed straight your cables conductor will bend. The above pictured Holland connector has a window in the side to allow technicians to see when the connector is completely on (cable jacket appears in window).

(2)



2. Insert your connector into your compression tool. The above pictured tool is the Holland Electronics CT-FBR.

(3)

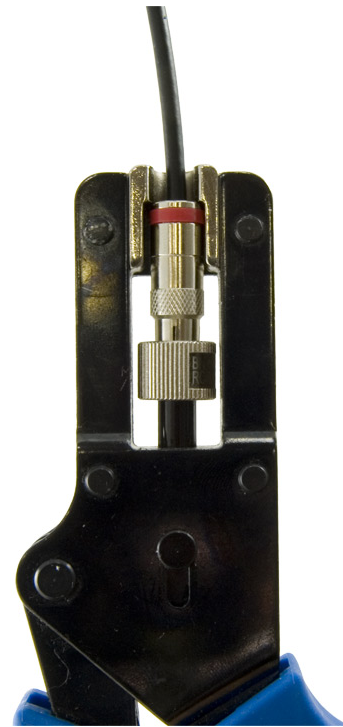

3. Squeeze the compression tools handle until the gap between the lower and upper connector halves is no longer visible. With Holland Electronics SLC connectors, there will be a pop and the end of the compression.



While these Instructions are using Holland Electronics Tools and Connectors, they can be used on numerous other manufacturers tools and connectors.