


Coaxial Cable Stripper Instructions



STEP 1: SET THE ORANGE V-BLOCK TO THE PROPER WIRE SIZE BY REMOVING IT, AND RE-INSTALLING IT WITH THE CORRECT SIZE.




STEP 4: REMOVE THE CABLE FROM THE STRIPPER. BLADE DEPTHS CAN BE ADJUSTED WITH THE ALLEN SCREWS ON THE BOTTOM OF THE UNIT.

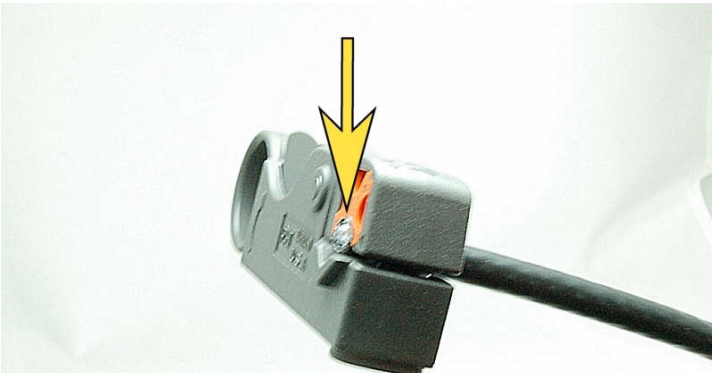


STEP 2: INSTALL THE CABLE SO THAT IT IS FLUSH WITH THE ORANGE WIRE INSERT.



STEP 5: IT IS RECOMMENDED YOU PULL OFF THE COAXIAL CABLE REMNANTS WITH YOUR FINGERS TO EXTEND THE LIFE OF YOUR STRIPPER BLADES.

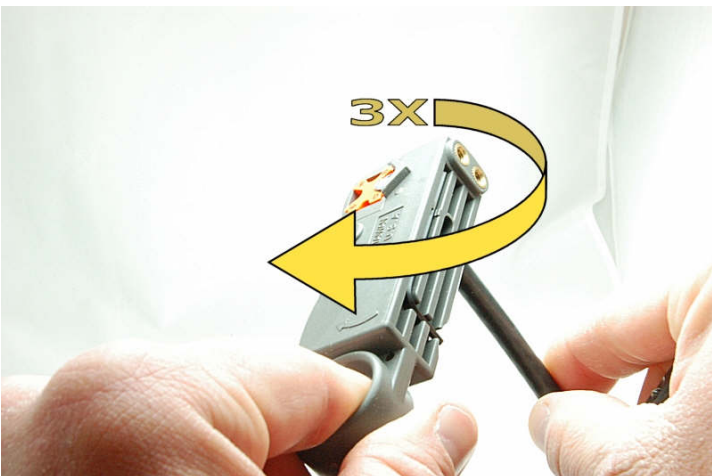

STEP 3: SPIN THE STRIPPER THREE TIMES CLOCKWISE AND THEN THREE TIMES COUNTER-CLOCKWISE.

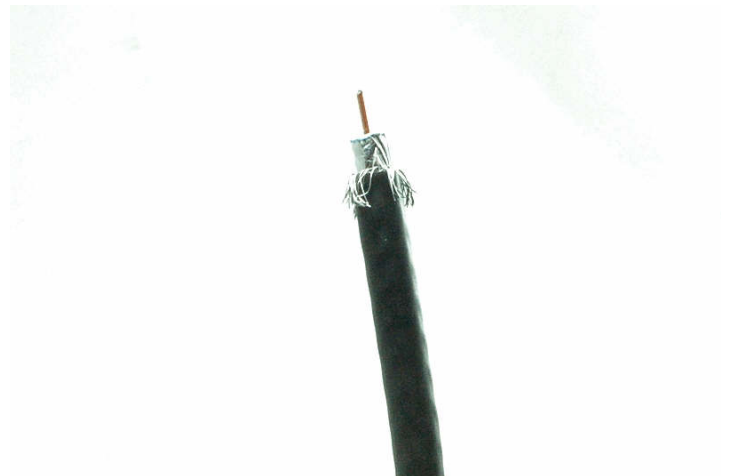

STEP 6: FOLD BACK THE BRAID SO THAT YOUR CABLE LOOKS LIKE THE ONE PICTURED ABOVE. YOU ARE NOW READY TO INSTALL YOUR CONNECTOR.